



		Geneva	Munich	Ridge	Seville	Melbourne	Volta
Brand	Model*						
Canon	PowerShot A1100IS			5/10/20	20		
Canon	PowerShot A480			5/10	20		
Canon	PowerShot A590 IS			30			
Canon	PowerShot D10	30					
Canon	PowerShot G10		30	35			
Canon	PowerShot G11	30	30				
Canon	PowerShot S90		20	20	20		
Canon	PowerShot SD300/Ixus 40		10	5	20		
Canon	PowerShot SD1100IS/Ixus 80	10	10/20	5/10	20	10	10/20
Canon	PowerShot SD1200 IS	10	10		20		
Canon	<b>PowerShot SD1300 IS/1400 IS</b>	<b>10</b>	<b>10</b>	<b>5/10</b>	<b>20</b>		<b>10/20</b>
Canon	PowerShot SD780 IS	10	10		20		20
Canon	PowerShot SD940 IS	10	10	5/10	20		10/20
Canon	PowerShot SD960 IS		10	5	20	10	10/20
Canon	PowerShot SD970 IS		10	5/10/20	20		
Canon	PowerShot SD980 IS		10/20	5/10	20	10	10/20
Canon	PowerShot SX120 IS	30		35			
Canon	PowerShot SX200 IS/SX210 IS	30		30			
Casio	EXFC100	10	10/20		20	10	10/20
Casio	EX-FH100	30	20	20			
Casio	Exilim EX-G1	10	20			10	20
Casio	Exilim EX-H15		20	20	20		
Casio	Exilim EX-H10	10	20		20	10	10/20
Casio	Exilim EX-S12	10	10	5/10	20		10/20
Casio	Exilim EX-S5	10	10		20	10	10/20
Casio	Exilim EX-Z2000	10	10/20		20	10	10/20
Casio	Exilim EX-Z29	10	10	5/10	20	10	10/20
Casio	Exilim EX-Z33	10	10		20	10	10/20
Casio	Exilim EX-Z550	10	10/20		20	10	10/20
Fuji	Finepix A170	10	10	5/10	20	10	10/20
Fuji	Finepix A230	10	10	5/10	20	10	10/20
Fuji	Finepix F200EXR	10	10	5/10	20	10	10/20
Fuji	Finepix F70EXR	10	10/20		20	10	10/20
Fuji	Finepix F72EXR	10	10/20		20	10	10/20
Fuji	Finepix J10/J20	10	10		20		10/20
Fuji	Finepix J27	10	10	5/10	20	10	10/20
Fuji	Finepix J28	10	10	5/10	20	10	10/20
Fuji	Finepix J29	10	10	5/10	20	10	10/20
Fuji	Finepix J38	10	10	5/10	20	10	10/20
Fuji	Finepix S1500						
Fuji	Finepix Z30	10	10/20	5/10	20	10	10
Fuji	Finepix Z33W/P	10	10	5/10	20	10	10/20
Fuji	Finepix Z37	10	10	5/10	20		10/20
GE Digital	A1255						
GE Digital	A1455						
GE Digital	C1033			5/10	20		
GE Digital	C1233			5/10/20			
GE Digital	E1480 W		20	20	20		
GE Digital	E1486 TW		20	20	20		
GE Digital	G5WP	10		10		10	10/20
GE Digital	J1250		10	5/10	20		20
GE Digital	J1455		10	5/10	20		20
GE Digital	X5						
GE Digital	A1050		10	5/10	20		20
GE Digital	A1250		10	5/10	20		20
GE Digital	A1251	10	20			10	10/20
GE Digital	A950		10	5/10	20		20
Kodak	Easysshare C140	10		5/10	20		10/20
Kodak	Easysshare C180		10	5/10	20		20
Kodak	Easysshare C182			5/10/20	20		
Kodak	Easysshare C913		10	5/10	20		20
Kodak	Easysshare M340	10	10	5/10	20	10	10/20
Kodak	Easysshare M341	10	10	5/10	20	10	10/20
Kodak	Easysshare M380						30
Kodak	Easysshare M381	10	10/20		20	10	10/20
Kodak	Easysshare M341	10	10	5/10	20	10	10/20
Kodak	Easysshare Z1485IS			35			
Kodak	Easysshare Z915			35			
Kodak	Easysshare Z950	30		35			
Kodak	Easysshare M1033	10	10	5/10	20		10/20
Kodak	CD80		10	5/10	20		20
Nikon	Coolpix S60	10	10	5/10	20	10	10/20
Nikon	Coolpix S9		10	5/15	20		10/20
Nikon	Coolpix L16/L18			5/10/20	20		
Nikon	Coolpix L19/L20			5/10/20	20		
Nikon	Coolpix S1000pj	10	10	5/10	20		10/20
Nikon	Coolpix S202/S203	10	10	5/10	20		10/20
Nikon	Coolpix S210	10	10	5/10	20	10	10/20
Nikon	Coolpix S220	10	10		20		10/20
Nikon	Coolpix S230		10		20		
Nikon	Coolpix S560	10	10	5/10	20		10/20
Nikon	Coolpix S570	10	10/20	5/10	20	10	10/20
Nikon	Coolpix S60	10	10	5/10	20		10/20
Nikon	Coolpix S620		10	5	20		10/20
Nikon	Coolpix S630		10	5/10/20	20		
Nikon	Coolpix S640	10	10	5/10	20		10/20
Nikon	Coolpix S70	10	10	5/10	20	10	10/20
Nikon	Coolpix S710	10	10	5/10	20		10/20
Nikon	<b>Coolpix L22</b>		<b>20</b>	<b>20</b>	<b>20</b>		
Nikon	<b>Coolpix S3000/S4000</b>	<b>10</b>	<b>10</b>	<b>5/10</b>	<b>20</b>	<b>10</b>	<b>10/20</b>
Nikon	Coolpix S6000	10	10	5/10	20	10	10/20
Nikon	Coolpix S8000		20	20			
Olympus	FE-20	10	10	5/10	20	10	10/20
Olympus	FE-25			5/10	20		10/20
Olympus	FE-26			5/10/20	20		
Olympus	FE-4000	10	10	5/10	20	10	10/20
Olympus	FE-4010	10	10	5/10	20		10/20
Olympus	FE-46			5/10/20	20		
Olympus	FE-47			5/10/20	20		
Olympus	FE-5000	10	10	5/10	20	10	10/20
Olympus	FE-5020		10	5/10	20		20
Olympus	FG-4020	10	10	5/10	20	10	10/20
Olympus	R-100	10	10	5/10	20	10	10/20
Olympus	Stylus 6020		20				
Olympus	Stylus 8010		20	20	20		
Olympus	Stylus 1050AW	10	10	5/10	20		10/20
Olympus	Stylus 5010	10	10	5/10	20	10	10/20
Olympus	Stylus 7030			5/10	20		
Olympus	Stylus 7040		10	5/10	20		
Olympus	Stylus 550WP	10	10	5/10	20	10	10/20
Olympus	Stylus 7010	10		5/10	20	10	10/20
Olympus	Stylus 9000			5/10/20	20		
Olympus	Stylus TOUGH 6000	10		5/10	20	10	10/20
Olympus	Stylus TOUGH 8000	10		5/10	20	10	10/20
Olympus	Tough 3000		20				
Olympus	E-PL1						
Panasonic	Lumix DMC FS15K		10	5	20	10	10/20
Panasonic	Lumix DMC FS25	10	10	5/10	20	10	10/20
Panasonic	Lumix DMC FS7		10	5	20	10	10/20
Panasonic	Lumix DMC LX3K		20	20			
Panasonic	Lumix DMC TS1	10		5/10	20	10	10/20
Panasonic	Lumix DMC TS2		20		20		20
Panasonic	Lumix DMC ZR1		10	5/10/20	20		

							
		Geneva	Munich	Ridge	Seville	Melbourne	Volta
Brand	Model*						
Panasonic	Lumix DMC ZR3		10/20	20	20		
Panasonic	Lumix DMC ZS1	30		20/30			
Panasonic	Lumix DMC ZS3	30		20/30			
Panasonic	Lumix DMC ZS5	30		20/30			
Panasonic	Lumix DMC ZS7 / TZ10	30		20/30/35			
Panasonic	FP3	10	10/20		20	10	10/20
Panasonic	Lumix DMC-ZS5	30		20/30			
Panasonic	Slimline FP1	10	10/20		20	10	10/20
Samsung	AQ100	10		10			10/20/30
Samsung	CL80		20				
Samsung	HZ30W	30		30			
Samsung	HZ35W	30		30			
Samsung	SL102	10	10	5/10	20		10/20
Samsung	SL202	10	10	5/10	20		10/20
Samsung	SL30			5/10	20		20
Samsung	SL40			5/10	20		20
Samsung	SL420	10	10	5/10	20		10/20
Samsung	SL620	10	10	5/10	20		10/20
Samsung	SL720	10	10	5/10	20		10/20
Samsung	TL100	10	10		20		10/20
Samsung	TL100	10	10	5/10	20	10	10/20
Samsung	TL105	10	10	5/10	20	10	10/20
Samsung	TL110	10	10	5/10	20	10	10/20
Samsung	TL220	10	10/20		20	10	10/20
Samsung	TL225	10	10		20	10	10/20
Samsung	TL240		20				
Sony	DSC H20	30					
Sony	DSC H55	30	20	20	20		
Sony	DSC HX1	10	10		20	10	10/20
Sony	DSC HX5V		20	20	20		
Sony	DSC S2100			20	20		
Sony	DSC T90	10	10		20	10	10
Sony	DSC TX1	10	10		20	10	10/20
Sony	DSC TX5	10	10	5/10	20		10/20
Sony	DSC TX7/TX9						
Sony	DSC W180		10	5	20		10/20
Sony	DSC W190B		10	5	20		10/20
Sony	DSC W220	10	10	5/10	20	10	10/20
Sony	DSC W230	10	10	5/10	20	10	10/20
Sony	DSC W290	10	10/20	5/10	20	10	10/20
Sony	DSC W310	10	10	5/10	20	10	10/20
<b>Sony</b>	<b>DSC W330</b>	<b>10</b>	<b>10</b>		<b>20</b>	<b>10</b>	<b>10/20</b>
Sony	DSC W350		10		20		10/20
Sony	DSC W370		10/20		20		20
Sony	DSC WX1		10		20		10
Sony	MHS CM5IV	30		35			
Sony	MHS PM5	10	20			10	20
Vivitar	Vivicam 25			5/20	20		
Vivitar	Vivicam 5022	10	10	5/10	20		10/20
Vivitar	Vivicam 5024	10	10	5/10	20		
Vivitar	Vivicam 8025	10	10		20		10/20
Vivitar	Vivicam 8225	10	10	5/10	20		10/20
Vivitar	Vivicam V15		20				
Vivitar	Vivicam X024	10	10	5/10	20		10/20
Vivitar	T328			5/10	20		
Vivitar	VS17G	10	20		20		10/20
Vivitar	VS27G		10				
Vivitar	VS28B		10				
Leica	D LUX 4	30					
Hewlett Packar	CB350		10	5/10	20		20
Hello Kitty	87009	10	10	5/10	20		10/20
Pentax	OPTIOW80		10/20		20		20
Polaroid	A530	10	10		20		10/20